



GM HOOK

P/N 1028

INSTALLATION INSTRUCTIONS

For additional assistance call 888-514-0083 between 8AM-5PM EST or email: info@pactoolmounts.com

CAUTION


To avoid the risk of personal injury, property damage or product damage, please use the included fasteners for mounting.

- * The bracket must be securely mounted to a stable surface and material.
- * PAC recommends regular and frequent inspections to be certain of proper operation and installation.




NO DRILLING OR FASTENERS REQUIRED

Step #1 – Clean Surface

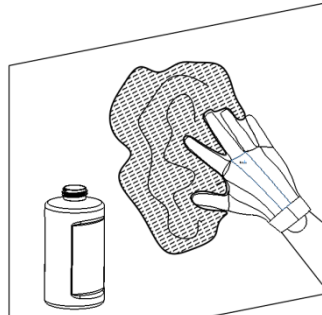


Fully clean the surface with a solution consisting of 50% water-50 % isopropyl alcohol.

Step #2 – Remove Tape Backing

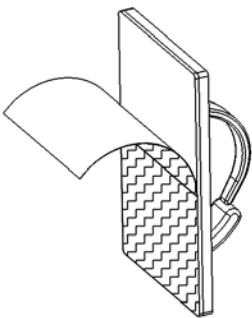

Peel the backing from the double sided tape and prepare to affix to mounting surface.

Step #3 – Attach to Surface

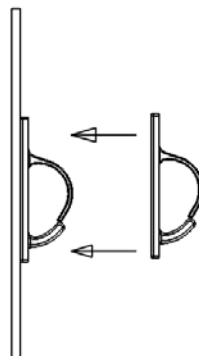

Firmly and evenly press bracket to the mounting surface and apply pressure

Wait 72 hours before use to allow bond to fully set.

NOTE: Mounting surfaces must be free of dirt, oils and grease. Surfaces must be flat and smooth and free of voids or protrusions for maximum performance.